

SWIMMING



PROGRAMMER AQ

User's Manual

3480.501.02

Version 1.0

Edition January 2012

Caution and safety precautions

- Never use any other charger than the supplied or a type approved by Swiss Timing. This could destroy the battery, cause damage to unit, and possible cause personal injury due to fire or/and electrical shock.
- Never bypass a power cord ground lead by breaking off the ground pin, or by using inappropriate extension cords or adapters.
- Never plug a power cord into the AC power source until you have made sure that all installation, cabling and power levels, are proper, and that the applicable procedures in this manual have been followed.
- Protect the equipment against splashing, rain and excessive sun rays.
- Never use the device if it is damaged or insecure.
- Verify the selection of the power distribution.
- Verify that the voltage quoted on the rating plate is the same as your voltage. Connect the appliance only to power sockets with protective earth. The use of incorrect connection voids warranty.
- This program may be modified at any time without prior notification.
- Do not open the case; there is nothing that needs servicing inside it. Nevertheless, if the case must be opened, you must call for some qualified personnel. The power supply cable must be disconnected before opening the case.
- During the transport of all Swiss Timing equipment delivered with a reusable carry case, the said case should be used at all times. This is imperative to limit the damage, such as shocks or vibration that can be caused to the units during transport.
- The same cases should also be used when returning equipment to Swiss Timing for repair. Swiss Timing reserves the right to refuse all guarantees if this condition is not fulfilled.
- If the installation includes a horn, be sure to maintain a sufficient security distance from the public.

Documentation Updates

Swiss Timing Ltd. reserves the right to make improvements in the products described in this documentation at any time without prior notice. Furthermore, Swiss Timing Ltd. reserves the right to revise this documentation in its content at any time and without any obligation to notify any person or organization of such revision.

Disclaimer

The information provided in this documentation has been obtained from sources believed to be reliable, accurate and current. However, Swiss Timing Ltd. makes no representation or warranty, express or implied, with respect, but not limited to, the completeness, accuracy, correctness and actuality of the content of this documentation. Swiss Timing Ltd. specifically disclaims any implied warranty of merchantability, quality and/or fitness for any particular purpose. Swiss Timing Ltd. shall not be liable for errors contained in this documentation or for incidental or consequential damages in connection with the supply, performance or use of this documentation.

Environment



This symbol indicates that this product should not be disposed with household waste. It has to be returned to a local authorized collection system. By following this procedure you will contribute to the protection of the environment and human health. The recycling of the materials will help to conserve natural resources.

Copyright

© Swiss Timing Ltd.

All rights reserved.

This documentation may not, as a whole or in part, be copied, translated, reproduced, transmitted or reduced and/or stored to any electronic medium or machine-readable form without the prior written consent of Swiss Timing Ltd.

TABLE OF CONTENTS

1	INTRODUCTION.....	1
1.1	Concept.....	1
1.2	General view.....	1
2	INSTALLATION.....	2
2.1	Batteries installation.....	2
3	GETTING STARTED	3
3.1	Power up	3
3.2	Main menu.....	3
3.2.1	Turn off.....	4
3.2.2	ODB10-SW circuits / Read ADD.....	4
3.2.3	ODB10-SW circuits / Write ADD.....	5
3.2.4	Quantum mobile harness (PRY or PRY & SDY) / Read ADD	6
3.2.5	Quantum mobile harness (PRY) / Write ADD	7
3.2.6	Quantum mobile harness (PRY & SDY) / Write ADD.....	8
3.2.7	Read version.....	9
4	PROPERTIES.....	10
4.1	Dimensions and weight.....	10
4.2	Storage & Maintenance	10
5	APPENDIX.....	11
5.1	Index of figures	11
5.2	Version history	11

1 INTRODUCTION

1.1 Concept

The purpose of the programmer is to codify or read the water lanes on the ODB10-SW circuits or Quantum mobile harness.

1.2 General view

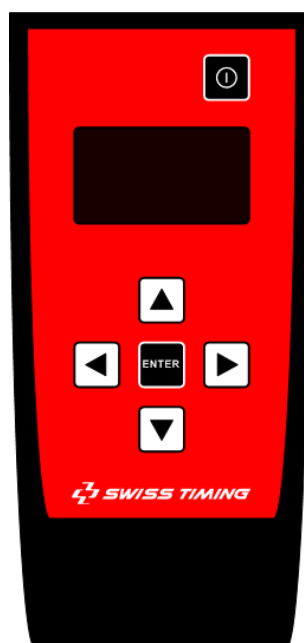








Figure 1 – RFID Programmer

Key	Description
	The power on key switch on the programmer
	The Enter key confirms the input
	The Up key used to go up in the menu
	The Left key used to go left in the menu
	The Down key used to go down in the menu
	The Right key used to go right in the menu

3480.921 Set of Primary harness programmer with a Primary mobile harness

3480.922 Set of Primary & Secondary harness programmer with a PRY & SDY mobile harness

2 INSTALLATION

2.1 Batteries installation

Pull out the lever and remove the cover as below.



Figure 2 – Batteries cover's removal


The batteries box is located in the back of the programmer and you need 2x AA or UM-3 1.5 volts batteries.



Figure 3 – Batteries box

3 GETTING STARTED

3.1 Power up


Turn on the unit by pressing 

The home screen shows the name of the unit and the version.



Figure 4 – Home screen at power up

3.2 Main menu

You can access the *Turn OFF*, *Read ADD*, *Write ADD* and *Read vers.* functions by pressing . The battery level appears at the top right menu.

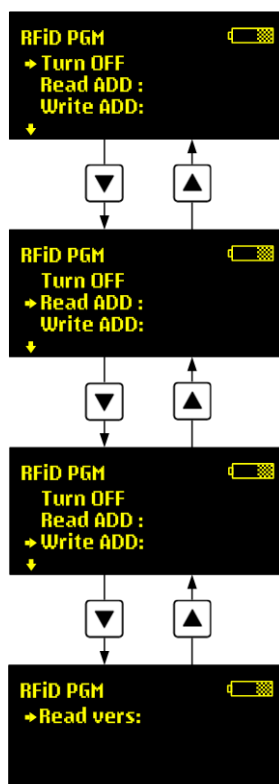





Figure 5 – Main menu

3.2.1 Turn off

This function allows switching off the programmer.




- 1) Select the function " Turn OFF" by pressing  or  and press 



After 1 minute of inactivity, the programmer switching off automatically.


3.2.2 ODB10-SW circuits / Read ADD

This function allows reading the number of the water lane inside the ODB10-SW circuits.

- 1) Select the function " Read ADD" by pressing  or  and press 




- 2) Pass over the ODB10-SW circuit.

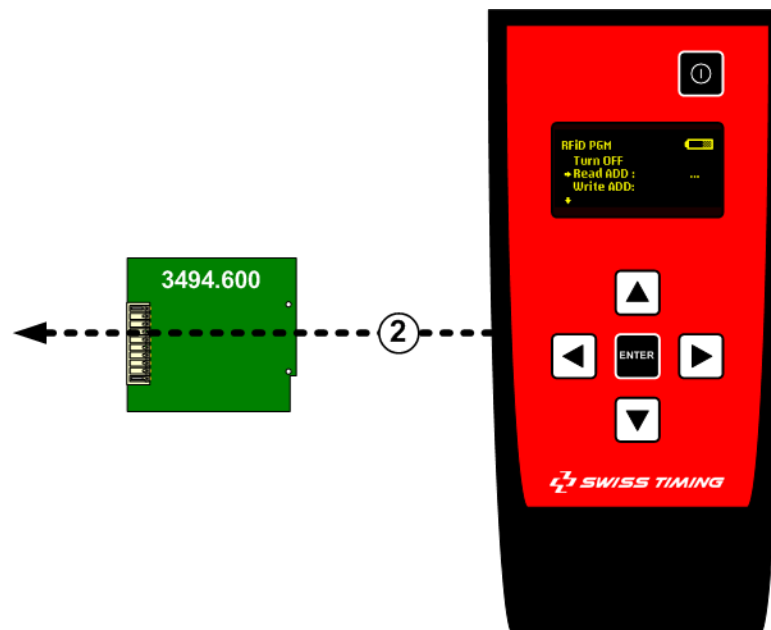




THE DISTANCE BETWEEN THE MODULE & THE PRG SHOULD NOT EXCEED 1 CM

- 3) The water lane must be appears as below.






3.2.3 ODB10-SW circuits / Write ADD

This function allows writing the number of the water lane inside the ODB10-SW circuits.


- 1) Select the function " Write ADD" by pressing  or  and press 



- 2) Select the desired water lane by pressing  or  and press 




- 3) Pass over the ODB10-SW circuit.

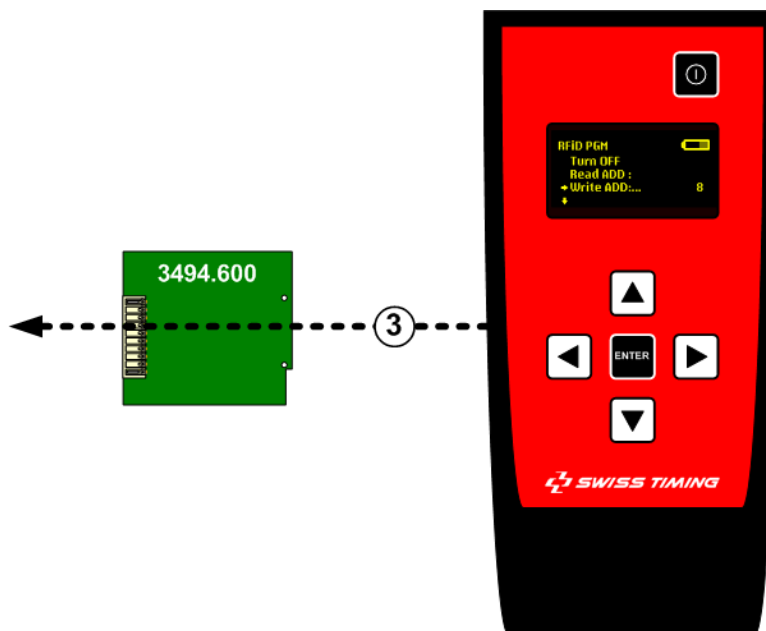




THE DISTANCE BETWEEN THE MODULE & THE PRG SHOULD NOT EXCEED 1 CM

- 4) The message OK must be appears as below.




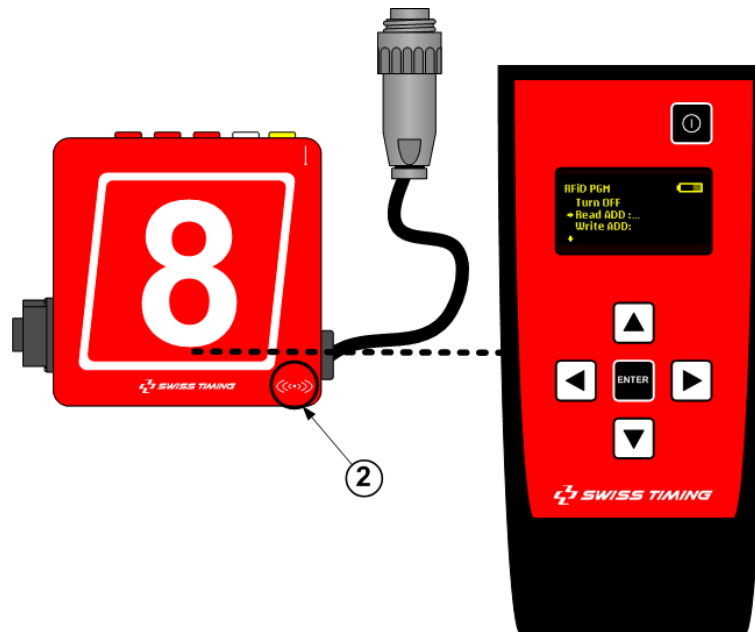
3.2.4 Quantum mobile harness (PRY or PRY & SDY) / Read ADD

This function allows reading the number of the water lane inside the Quantum mobile harness.

- 1) Select the function " Read ADD" by pressing  or  and press 



- 2) Positioning the programmer on the antenna logo  of the Quantum mobile harness.






THE DISTANCE BETWEEN THE MODULE & THE PRG SHOULD NOT EXCEED 1 CM

- 3) The water lane must be appears as below.






3.2.5 Quantum mobile harness (PRY) / Write ADD

This function allows writing the number of the water lane inside the Quantum mobile harness.


- 1) Select the function " Write ADD" by pressing  or  and press 



- 2) Select the desired water lane by pressing  or  and press 




- 3) Positioning the programmer on the antenna logo  of the Quantum mobile harness.

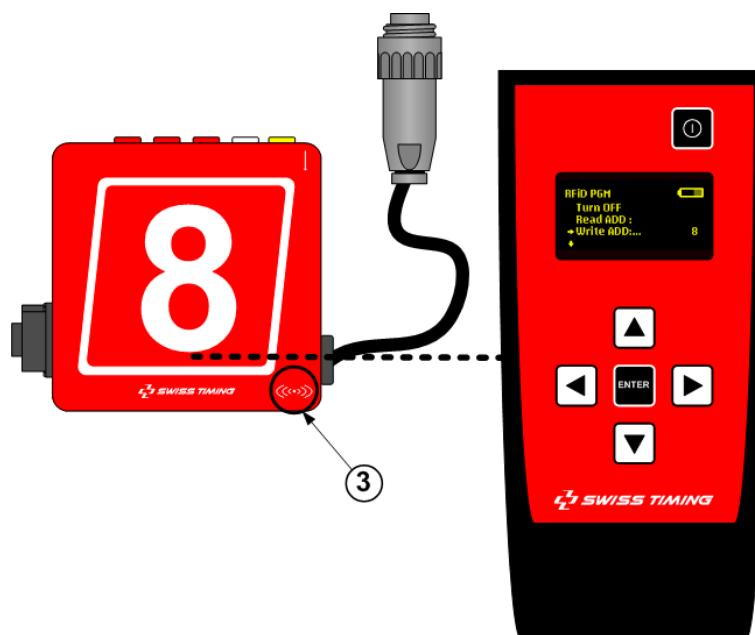

THE DISTANCE BETWEEN THE MODULE & THE PRG SHOULD NOT EXCEED 1 CM

- 4) The message OK must be appears as below.






- 5) Check in the software that the mobile harness appears in the corrected lane.

3.2.6 Quantum mobile harness (PRY & SDY) / Write ADD




This function allows writing the number of the water lane inside the Quantum mobile harness.

The Quantum mobile harness must be connected to the Quantum AQ (HA1 or HA2).



- 1) Unselect the mobile harness (Tuchel) in the swimming software.

- 2) Select the function " Write ADD" by pressing  or  and press 




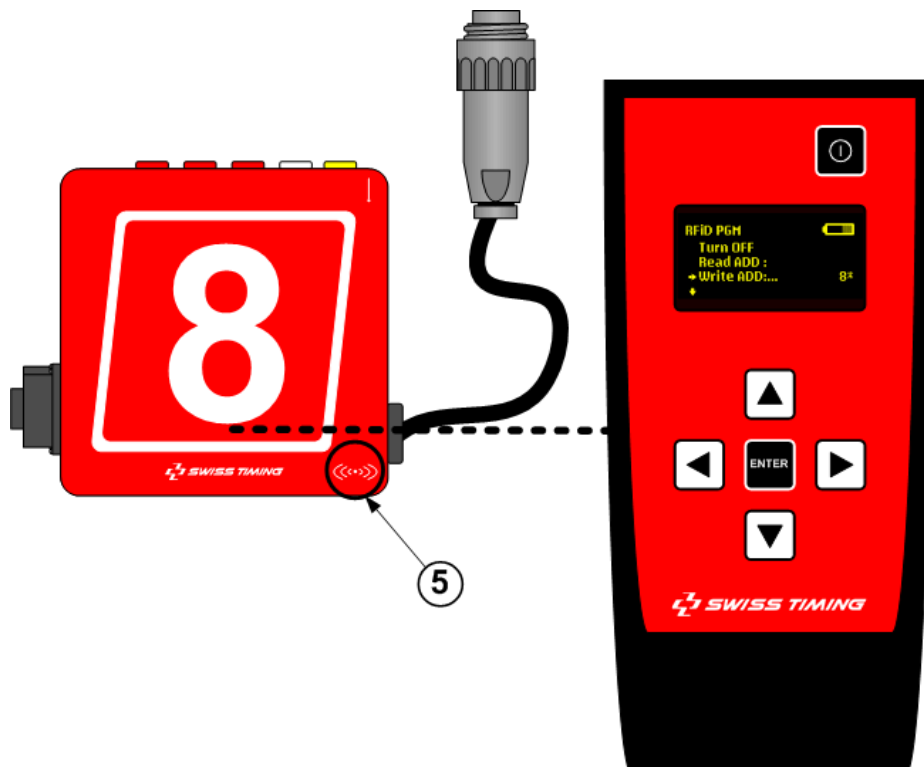
- 3) Select the desired water lane by pressing  or  and press 



- 4) Press  , a star will appears near the desired water lane and press 



- 5) Positioning the programmer on the antenna logo  of the Quantum mobile harness.



**THE DISTANCE BETWEEN THE MODULE & THE PRG SHOULD NOT EXCEED 1 CM**

- 6) The message OK must be appears as below.



- 7) Select the mobile harness (Tuchel) in the swimming software.
8) Check in the software that the mobile harness appears in the corrected lane.
9) Repeat the procedure from chapter 3.2.6 but without the star.

3.2.7 Read version

This function allows reading the version of harness circuits inside the quantum mobile harness or the ODB10-SW harness circuits.

4 PROPERTIES

4.1 Dimensions and weight

Dimension: Hx168/Wx74.4/Dx35

Case weight without the batteries: 0.150 kg

Case weight with the batteries: 0.200 kg

4.2 Storage & Maintenance

The RFID programmed must be kept in a clean and dry place.

The storage temperature is -10°C to +60°C whereas the working temperature is 0°C to +45°C.

5 APPENDIX

5.1 Index of figures

Figure 1 – RFID Programmer.....	1
Figure 2 – Batteries cover's removal	2
Figure 3 – Batteries box.....	2
Figure 4 – Home screen at power up	3
Figure 5 – Main menu	3

5.2 Version history

Version	Date	Modifications since last version
1.0	10/01/12	Initial version

NOTES

SWISS TIMING LTD

A COMPANY OF THE **SWATCH GROUP**

P.O. Box 138, rue de l'Envers 1
2606 Corgémont
Switzerland

Phone +41 32 488 36 11
www.swisstiming.com
info@swisstiming.com