

APPLICATION INSTRUCTIONS FOR ANTISLIP

These instructions are a guideline, for a more explicit example please watch the video

1. **Prepare the tools**

- A roller
- A needle
- A cloth
- Alcohol spray

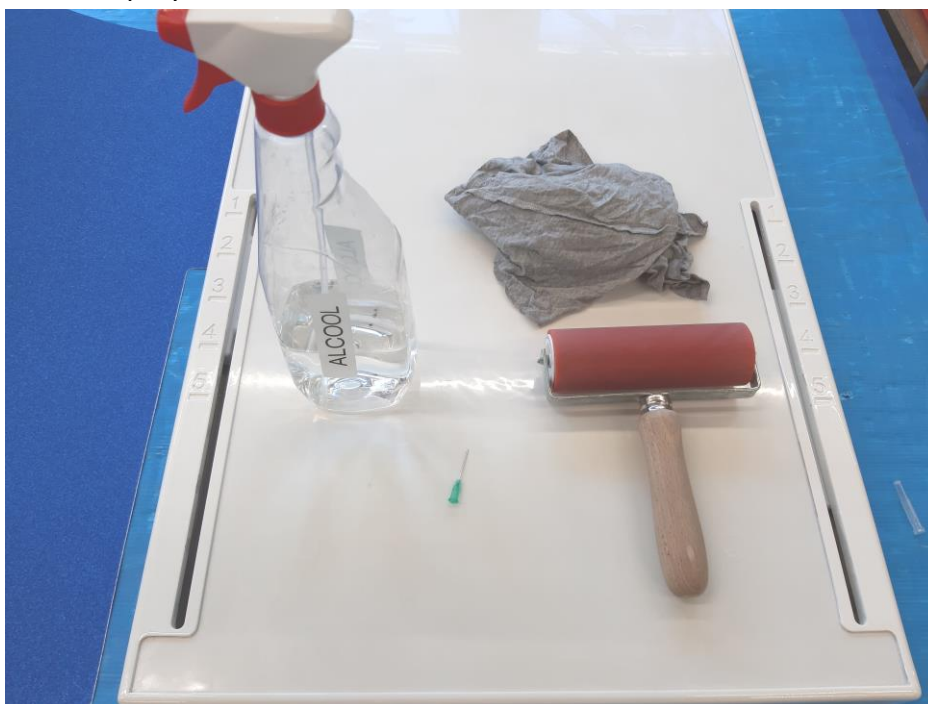

2. **Clean the application surfaces**






3. Prepare the antislip




4. Make a 4cm fold, flip it, and place it correctly on the form

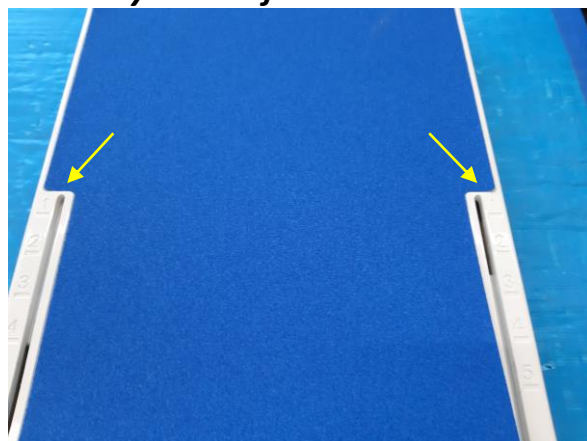


5. Past it correctly with hand following the forms and lines




6. Apply using the roller

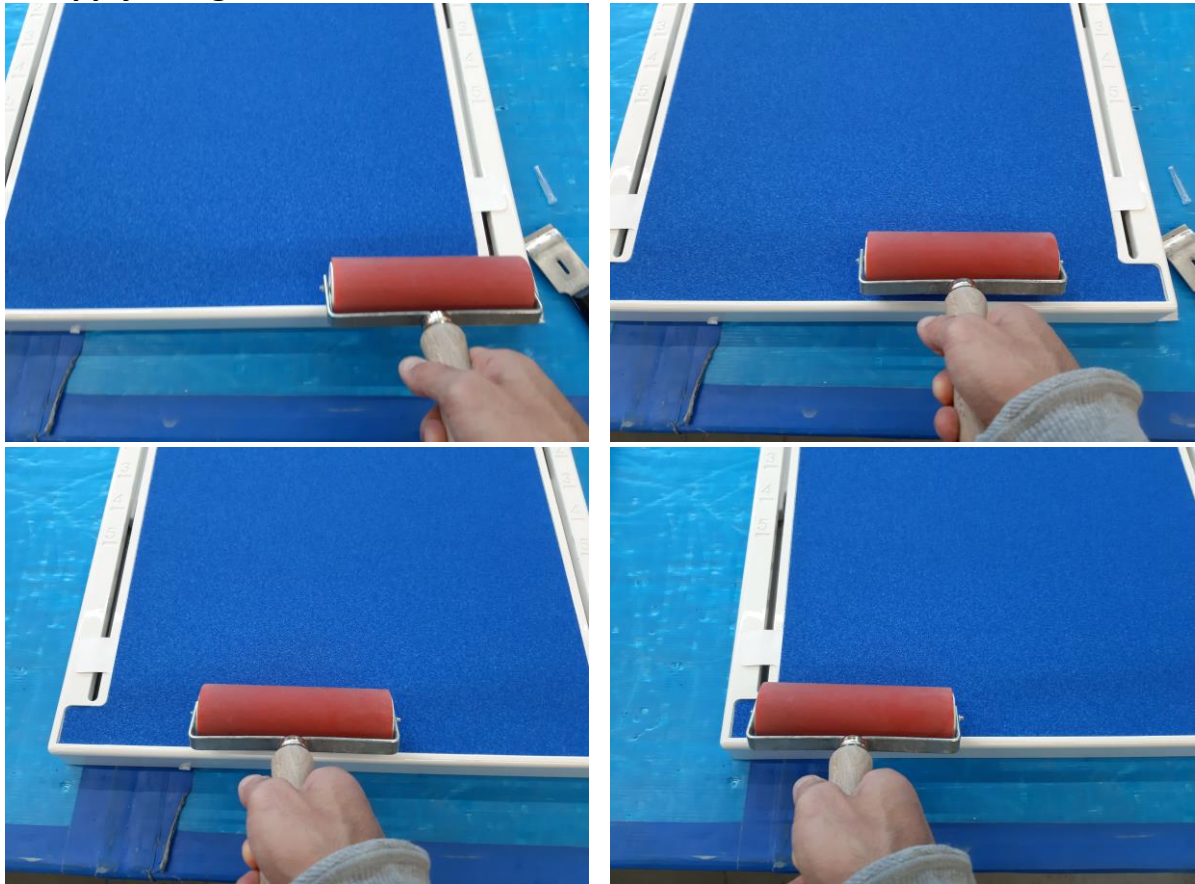


7. Remove the sheet taking each sides with both hands

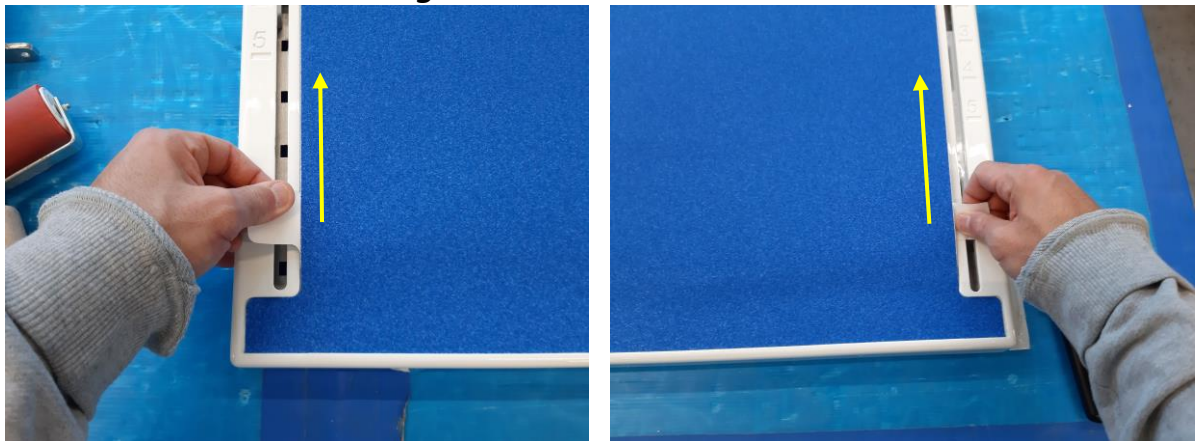


8. Apply using the roller

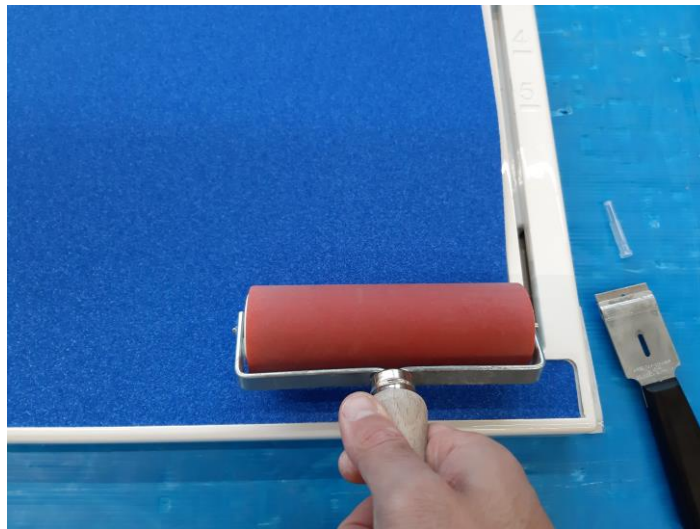

9. Repeat the steps 7 + 8 until the middle of the top

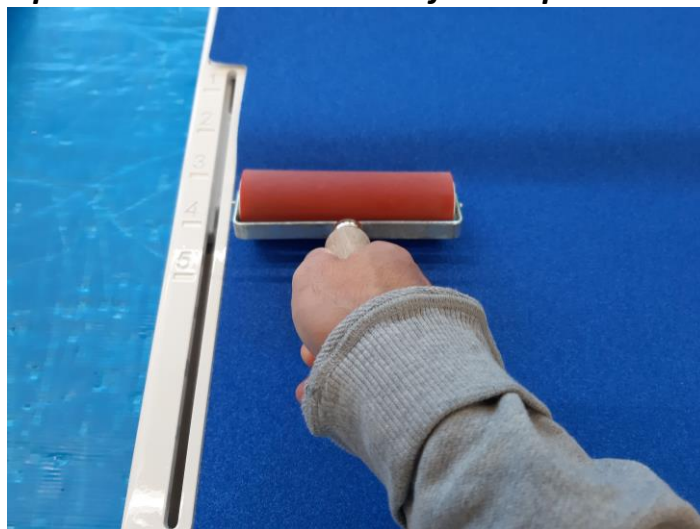

10. At the middle, take off the fold by the bottom then apply using the roller

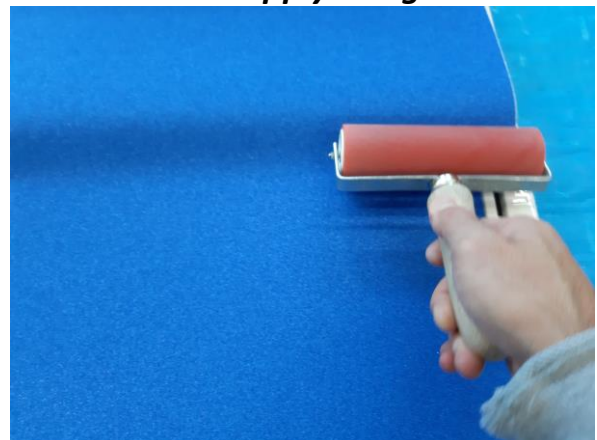

- 11. Remove the fold and apply using the roller. Repeat it until the end of the surface**




- 12. At the end of the surface, break the ankle using a roller**




- 13. Apply it on the little surface with finger**




- 14. Apply using the roller to past it correctly**

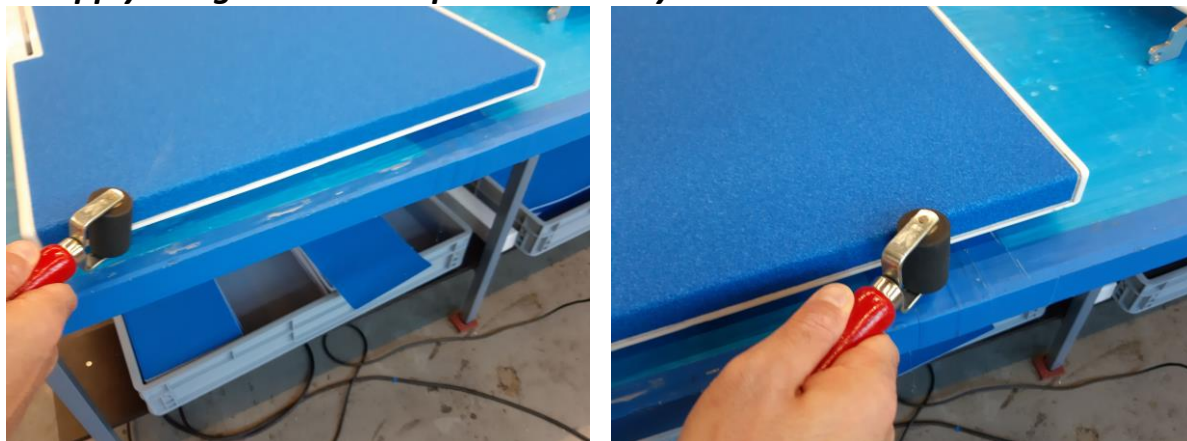

15. Apply correctly using the roller following the all lines of the form

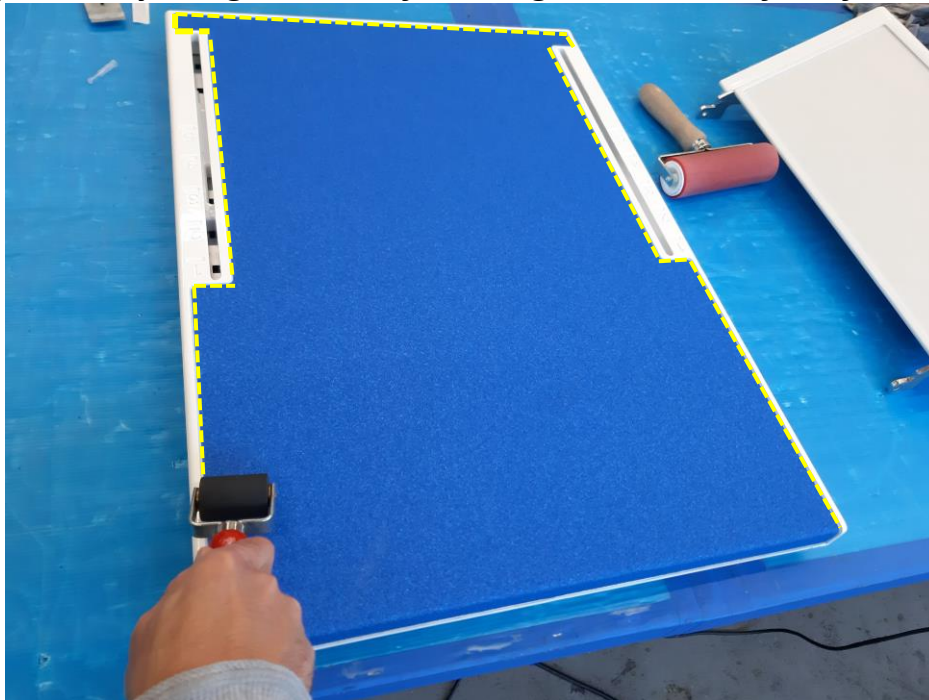

16. Apply with the roller on the whole surface

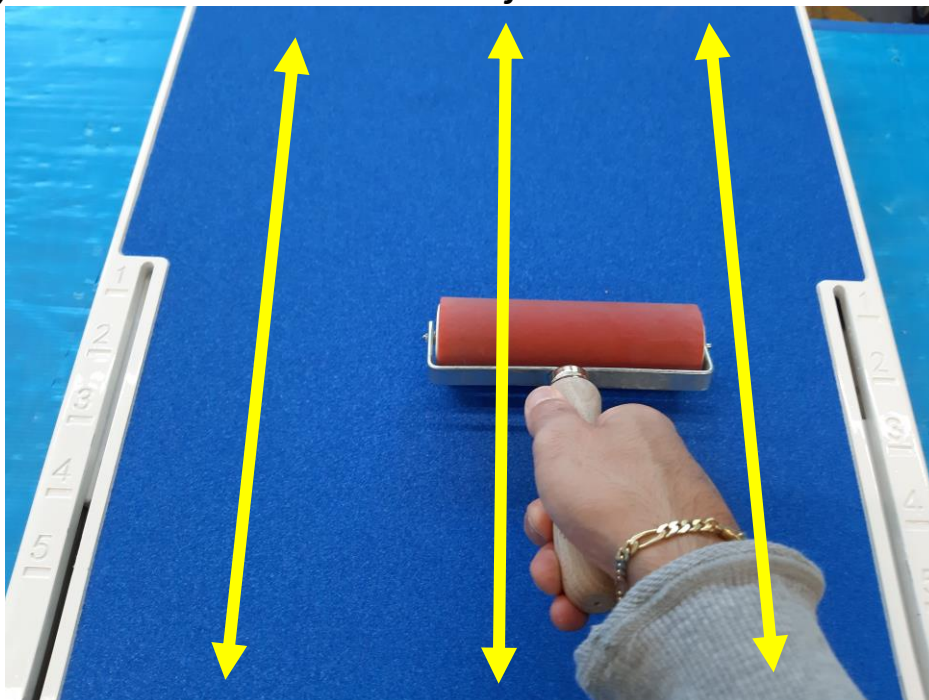

17. *If you find air bubbles, use the needle and press with the finger to get the air out*



18. *You can use the same instructions to apply the antislip on the footrest*



